## **YAZOO**

BIG WHEEL

22/24/26-INCH

COMMERCIAL

NON-COMPLIANCE MOWER P22B, P22W

S22B, S22W


P24B, P24W

S24B, S24W


P26B, P26W

S26B, S26W

ILLUSTRATED PARTS LIST

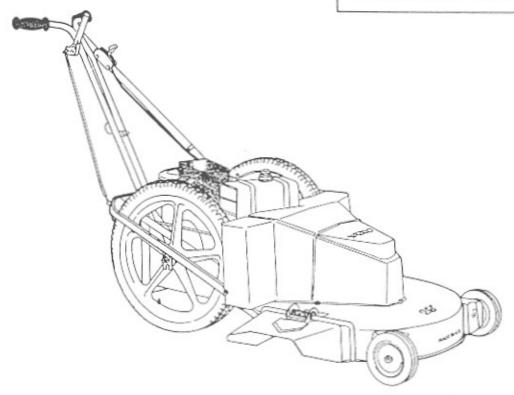

LITERATURE NUMBER 1301-083

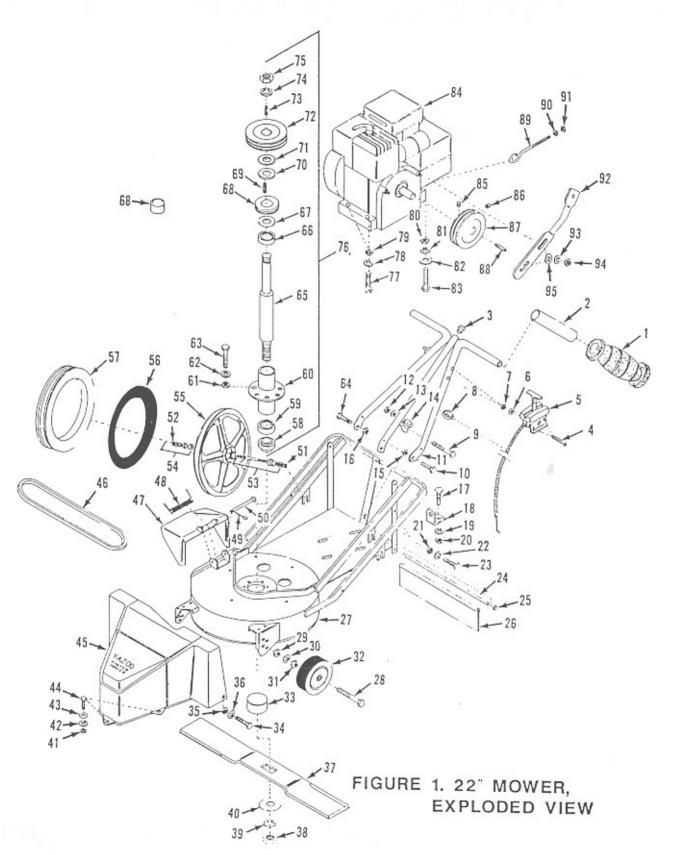


Big Wheel Commercial Owners Manual

KEY	PART NO.	DESCRIPTION	QTY.
1-1	703-016 703-034	GRIP, HANDLE SPONGE 7/8"	2 1 2 1 2 2 2
1-2 1-3	7 <del>03-01</del> 7/ 303-004	GRIP, PLASTIC BLACK 7/8" CAP, TUBE 7/8"	1
1-4	208-007	BOLT, 3/16" X 1 1/4"	2
1-5	301-120	CABLE, THROTTLE	1
1-6	2301-001	WASHER, LOCK 3/16"	2
1-7 1-8	1401-001 309-020	NUT, 3/16" CLIP, CABLE 7/8"	1
1-9	209-050	BOLT, 1/4" X 20" X 2"	
1-10	209-114	BOLT, 5/16" X 1"	1 2 1
1-11	801-527P	ASSEMBLY, HANDLE (P-22) ASSEMBLY, HANDLE (S-22)	1
1-11A 1-12	801-527S 1401-010	NUT, 1/4"	i
1-13	2301-003	WASHER, LOCK 1/4"	1
1-14	705-034	GUIDE, ROPE	1
1-15	1401-009	NUT, LOCK 1/4" NUT, LOCK 1/4"	2
1-16 1-17	1401-009 209-114	BOLT, 5/16" X 1"	i
1-18	214-281	BRACKET, BELT TENSIONING	1
1-19	2301-004	WASHER, LOCK 5/16"	1
1-20 1-21	1401-020 1401-020	NUT, 5/16" NUT, 5/16"	1
1-22	2301-004	WASHER, LOCK 5/16"	i
1-23	209-114	BOLT, 5/16" X 1"	1
1-24	1808-079	ROD, DRAG FLAP	1
1-25 1-26	303-021 609-001	CAP, DRAG FLAP ROD FLAP, DRAG	2
1-27	605-422P	ASSEMBLY, FRAME (P-22B)	i
1-27A	605-422S	ASSEMBLY, FRAME (S-22B)	1
1-27B	605-423P	ASSEMBLY, FRAME (P-22W)	1
1-27C 1-28	605-423S 103-102	ASSEMBLY, FRAME (S-22W) BOLT, 1/2" X 1 1/2"	2
1-29	1401-050	NUT, 1/2''	2
1-30	2301-008	WASHER, LOCK 1/2"	2
1-31	1401-050 2302-023	NUT, 1/2" WHEEL, FRONT	2 2 2 2 2
1-32 1-33	1906- <del>006</del> 021	SHIELD, HUB	1
1-34	209-049	BOLT, 1/4" X 1"	2
1-35	1401-009	NUT, LOCK 1/4"	2
1-36 1-37	2301-020 206-622	WASHER, FLAT 1/4" BLADE, CUTTING	2 2 2 1
1-38	1401-071	NUT, 5/8''	i
1-39	2301-010	WASHER, LOCK 5/8"	1
1-40	2301-096	WASHER, SPRING 5/8"	1
1-41 1-42	1401-010 2301-003	NUT, 1/4" WASHER, LOCK 1/4"	2
1-43	2301-020	WASHER, FLAT 1/4"	2
1-44	209-021	BOLT, 1/4" X 3/4" USS	2
1-45	804-073	HOOD	1
1-46 1-46A	205-512 205-041	V-BELT (P-22B, S-22B) V-BELT (P-22W)	5
1-46B	205-039	V-BELT (S-22W)	1 2 2 2 1 2 2 2 1 2 2
1-47	306-013	CHUTE, GUARD	
1-48	1916-036	SPRING, CHUTE	1
1-49	1604-002	PIN, COTTER 3/32" X 1"	1

KEY	PART NO.	DESCRIPTION	QTY.
1-50	1604-043	PIN, CLEVIS	1
1-51 1-52	1401-180 1401-180	NUT, REAR AXLE NUT, REAR AXLE	2 2 2 2 2 2 2 1
1-53	1105-013	KIT, REAR WHEEL	2
1-54	1105-013	KIT, REAR WHEEL	2
1-55 1-56	2302-100 2005-005	WHEEL, REAR TUBE, INNER	2
1-57	2003-006	TIRE, PNEUMATIC	2
1-58	101-002	ADAPTER, B/W	
1-59 1-60	204-060 806-017	BEARING, HUB 3/4" HOUSING, HUB	1
1-61	1401-020	NUT, 5/16"	1 1 6 6
1-62	2301-004	WASHER, LOCK 5/16"	6
1-63 1-64	209-120 209-108	BOLT, 5/16" X 1 1/4" NC BOLT, 5/16" X 3/4" NC	6
1-65	1904-034	SHAFT, HUB	1
1-66	204-060	BEARING, HUB	1
1-67 1-68	1913-220 1608-010	SPACER PULLEY, FSP (PART OF HUB ASSY, 808-161 ONLY)	1
1-68A	1913-057	SPACER (PART OF HUB ASSY, 808-160 ONLY)	1
1-69	1102-011	KEY, 3/16" X 3/16"	1
1-70 1-71	2301-028 2301-028	WASHER, 1 3/8" OD WASHER, 1 3/8" OD	1
1-72	1608-371	PULLEY, HUB	1
1-73	1102-001	KEY, 3/16" X 3/16"	1
1-74 1-75	2301-010 1401-070	WASHER, LOCK 5/8" NUT, 5/8"	1
1-76	808-160	ASSEMBLY, HUB (P-22B, P-22W)	1
1-76A	808-161	ASSEMBLY, HUB (S-22B, S-22W)	1
1-77 1-78	209-135 2301-004	BOLT, 5/16" X 1 3/4"	1 3 3 1
1-79	1401-020	WASHER, LOCK 5/16" NUT, 5/16"	3
1-80	1401-020	NUT, 5/16"	1
1-81 1-82	2301-004 2301-021	WASHER, LOCK 5/16"	1
1-83	209-138	WASHER, FLAT 5/16" BOLT, 5/16" X 2"	1
1-84	E244	ENGINE (P-22B, S-22B)	i
1-84A 1-85	E236 1901-009	ENGINE (P-22W, S-22W) SCREW, 5/16" X 5/16"	1
1-86	1901-009	SCREW, 5/16" X 5/16"	1
1-87	1608-370 €	PULLEY, ENGINE (P-22B, S-22B, S-22W)	i
1-87A 1-88	1608-083 1102-001	PULLEY, ENGINE (P-22W) KEY, 3/16" X 3/16"	1
1-89	212-014	BOLT, EYE 1/4" X 4"	1
1-90	2301-003	WASHER, LOCK 1/4"	1
1-91 1-92	1401-010 213-045	NUT, 1/4" BRACE, ENGINE SUPPORT (P-22B, S-22B)	1
1-93	2301-003	WASHER, LOCK 1/4"	1 2 2
1-94	1401-010	NUT, 1/4"	2
1-95	2301-020	WASHER, FLAT 1/4"	2


KEY	PART NO.	DESCRIPTION	QTY.
2-51 2-52 2-53 2-53 2-55 2-56 2-57 2-58 2-63 2-64 2-63 2-64 2-68 2-68 2-70 2-71 2-76 2-77 2-76 2-77 2-78 2-81 2-83 2-83 2-84 2-83 2-83 2-84 2-83 2-83 2-84 2-75 2-76 2-77 2-78 2-83 2-83 2-84 2-83 2-84 2-76 2-77 2-78 2-78 2-78 2-78 2-78 2-78 2-78	1401-180 1401-180 1105-013 1105-013 2302-099 2005-009 2003-010 101-002 204-060 806-017 1401-020 2301-004 209-120 209-108 1904-034 204-060 1913-057 1102-011 2301-028 1608-010 1913-057 1102-011 2301-028 1608-371 1102-001 2301-028 1608-371 1102-001 2301-010 1401-070 808-160 808-161 209-135 2301-004 1401-020 1401-020 1401-020 2301-004 2301-021 209-138 E244 E236	NUT, REAR AXLE NUT, REAR AXLE KIT, REAR WHEEL KIT, REAR WHEEL WHEEL, REAR TUBE, INNER TIRE, PNEUMATIC ADAPTER, B/W BEARING, HUB 3/4" HOUSING, HUB NUT, 5/16" WASHER, LOCK 5/16" BOLT, 5/16" X 1 1/4" NC BOLT, 5/16" X 3/4" NC SHAFT, HUB BEARING, HUB SPACER PULLEY, FSP (PART OF HUB ASSY. 808-161 ONLY) SPACER (PART OF HUB ASSY. 808-160 ONLY) KEY, 3/16" X 3/16" WASHER, 1 3/8" OD WASHER, 1 3/8" OD PULLEY, HUB KEY, 3/16" X 3/16" WASHER, LOCK 5/8" NUT, 5/8" ASSEMBLY, HUB (P-24B, P-24W) ASSEMBLY, HUB (S-24B, S-24W) BOLT, 5/16" X 1 3/4" WASHER, LOCK 5/16" NUT, 5/16" NUT, 5/16" NUT, 5/16" WASHER, LOCK 5/16"	QTY. 222222111666611111111111113331111111111
2-83 2-84	209-138 E244	BOLT, 5/16" X 2" ENGINE (P-24B, S-24B)	111111111111111111
2-95	2301-020	WASHER, FLAT 1/4"	2 2 2

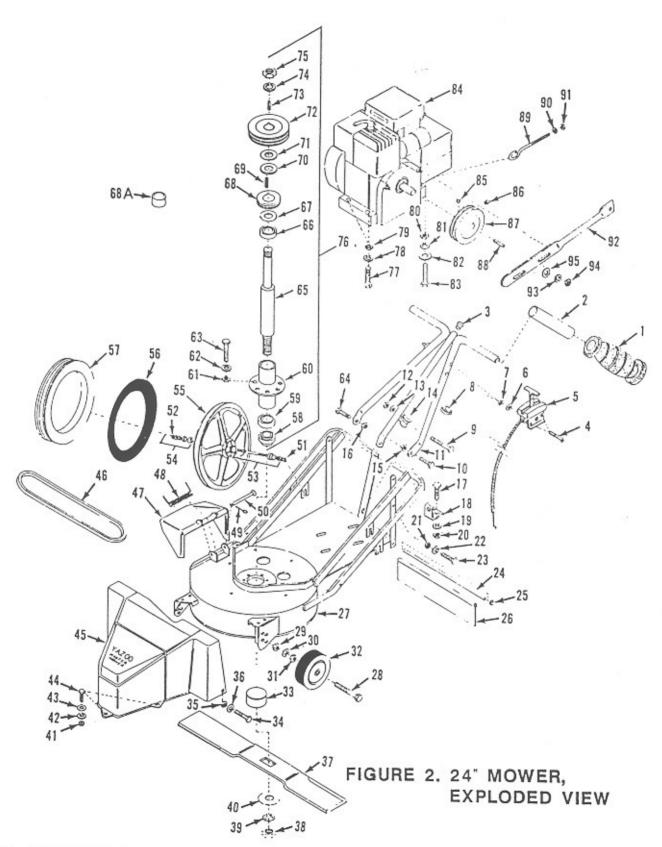

Big Wheel S-22/24/26 Owners Manual

\_ .

			071/
KEY	PART NO.	DESCRIPTION	QTY.
2-1	703-0183703-034	GRIP, HANDLE SPONGE 7/8" GRIP, PLASTIC BLACK 7/8"	2 1 2 1 1 2 1 1 2 1
2-2 2-3	7 <del>03-017</del> / 303-004	CAP, TUBE 7/8"	1
2-4	208-007	BOLT, 3/16" X 1 1/4"	2
2-5 2-6	301-120 2301-001	CABLE, THROTTLE (S-24B ONLY) WASHER, LOCK 3/16"	2
2-7	1401-001	NUT, 3/16"	2
2-8	309-020	CLIP, CABLE 7/8" (S-24B ONLY) BOLT, 1/4" X 20" X 2"	1
2-9 2-10	209-050 209-114	BOLT, 5/16" X 1"	2
2-11	801-528P	ASSEMBLY, HANDLE (P-24B, P-24W)	1
2-11A 2-12	801-528S 1401-010	ASSEMBLY, HANDLE (S-24B, S-24W) NUT, 1/4"	1
2-13	2301-003	WASHER, LOCK 1/4"	1
2-14 2-15	705-034 1401-009	GUIDE, ROPE NUT, LOCK 1/4"	1 2 1
2-16	1401-009	NUT, LOCK 1/4"	1
2-17	209-114	BOLT, 5/16" X 1" BRACKET, BELT TENSIONING	1
2-18 2-19	214-281 2301-004	WASHER, LOCK 5/16"	i
2-20	1401-020	NUT, 5/16"	1
2-21 2-22	1401-020 1 2301-004	NUT, 5/16" WASHER, LOCK 5/16"	1
2-23	209-114	BOLT, 5/16" X 1"	1 1 2 1
2-24 2-25	1808-078 303-021	ROD, DRAG FLAP CAP, DRAG FLAP ROD	2
2-26	609-002	FLAP, DRAG	
2-27	605-424P	ASSEMBLY, FRAME (P-24B)	1
2-27A 2-27B	605-424S 605-425P	ASSEMBLY, FRAME (S-24B) ASSEMBLY, FRAME (P-24W)	1
2-27C	605-425S	ASSEMBLY, FRAME (S-24W)	1
2-28 2-29	103-102 1401-050	BOLT, 1/2" X 1 1/2" NUT, 1/2"	1 2 2 2 2 2 1
2-30	2301-008	WASHER, LOCK 1/2"	2
2-31 2-32	1401-050 2302-023	NUT, 1/2" WHEEL, FRONT	2
2-33	1906- <del>006</del> 0みし	SHIELD, HUB	
2-34 2-35	209-049 1401-009	BOLT, 1/4" X 1" NUT, LOCK 1/4"	2
2-36	2301-020	WASHER, FLAT 1/4"	2 2 2 1 1
2-37	206-624	BLADE, CUTTING	1
2-38 2-39	1401-071 2301-010	NUT, 5/8'' WASHER, LOCK 5/8''	1
2-40	2301-096	WASHER, SPRING 5/8"	1
2-41 2-42	1401-010 2301-003	NUT, 1/4" WASHER, LOCK 1/4"	2
2-43	2301-020	WASHER, FLAT 1/4"	2
2-44	209-021	BOLT, 1/4" X 3/4" USS	2
2-45 2-46	804-072 205-042	HOOD V-BELT	1 1 2 2 2 2 1 2
2-47	306-012	CHUTE, GUARD	
2-48 2-49	1916-036 1604-002	SPRING, CHUTE PIN, COTTER 3/32" X 1"	1 1
2-50	1604-043	PIN, CLEVIS	1

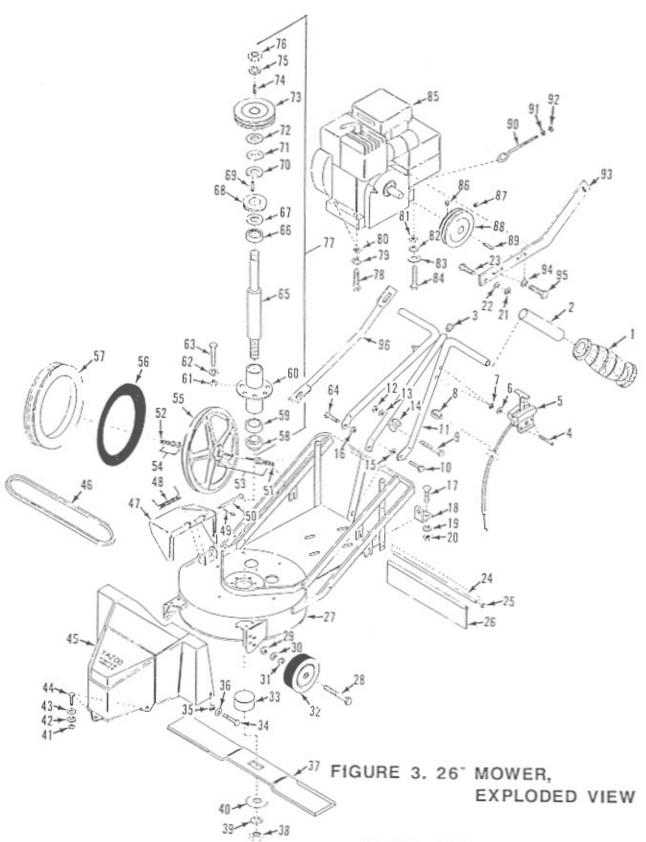

Big Wheel S-22/24/26 Owners Manual

00

KEY	PART NO.	DESCRIPTION	QTY.
KEY 3-1 3-2 3-3 3-4 3-5 3-6 3-7 3-8 3-9 3-10 3-12 3-13 3-14 3-15 3-16 3-17 3-18 3-20 3-21 3-22 3-23 3-24 3-25 3-27 3-27 3-28 3-29 3-30		PSCRIPTION  PAGRIP, HANDLE SPONGE 7/8"  GRIP, PLASTIC BLACK 7/8"  CAP, TUBE 7/8"  BOLT, 3/16" X 1 1/4"  CABLE, THROTTLE (S-26B ONLY)  WASHER, LOCK 3/16"  NUT, 3/16"  CLIP, CABLE 7/8" (S-26B ONLY)  BOLT, 1/4" X 20" X 2"  BOLT, 5/16" X 1"  ASSEMBLY, HANDLE (S-26B, S-26W)  NUT, 1/4"  WASHER, LOCK 1/4"  GUIDE, ROPE  NUT, LOCK 1/4"  NUT, LOCK 1/4"  BOLT, 5/16" X 1"  BRACKET, BELT TENSIONING  WASHER, LOCK 5/16"  NUT, 5/16"  NUT, 5/16"  WASHER, LOCK 5/16"  BOLT, 5/16" X 1"  ROD, DRAG FLAP  CAP, DRAG  ASSEMBLY, FRAME (S-26B)  ASSEMBLY, FRAME (S-26W)  BOLT, 1/2" X 1 1/2"  NUT, 1/2"  WASHER, LOCK 1/2"	QTY. 22121211112111111111112222221
3-31 3-32 3-33 3-34 3-35 3-36 3-37 3-38 3-40 3-41 3-42 3-43 3-44 3-45 3-46 3-46 3-47 3-48 3-50 3-51 3-52 3-53	1401-050 2302-023 1906-006021 209-049 1401-009 2301-020 206-626 1401-071 2301-010 2301-096 1401-010 2301-020 209-021 804-070 205-147 205-045 306-012 1916-036 1604-043 1401-180 1401-180 1105-013	NUT, 1/2" WHEEL, FRONT SHIELD, HUB BOLT, 1/4" X 1" NUT, LOCK 1/4" WASHER, FLAT 1/4" BLADE, CUTTING NUT, 5/8" WASHER, LOCK 5/8" WASHER, SPRING 5/8" NUT, 1/4" WASHER, LOCK 1/4" WASHER, FLAT 1/4" BOLT, 1/4" X 3/4" USS HOOD V-BELT (S-26B) V-BELT (S-26W) CHUTE, GUARD SPRING, CHUTE PIN, COTTER 3/32" X 1" PIN, CLEVIS NUT, REAR AXLE NUT, REAR AXLE KIT, REAR WHEEL	221222111122221221111222

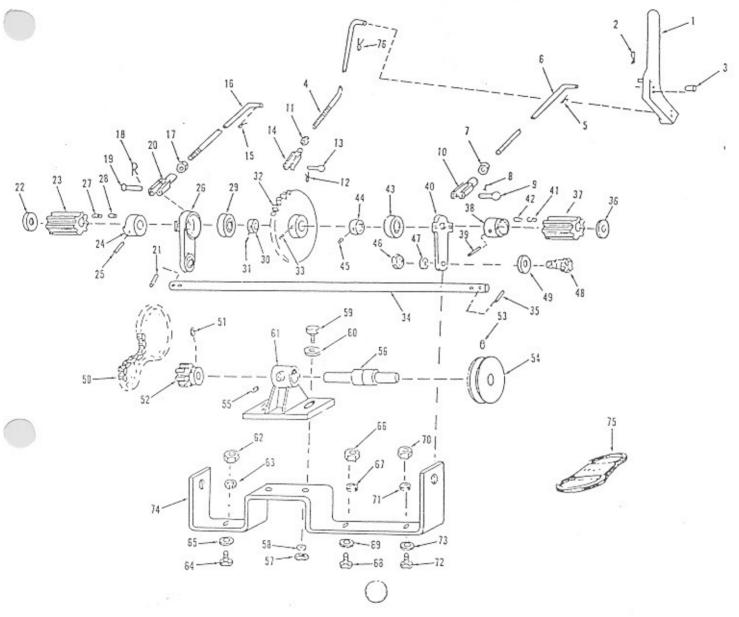


FIGURE 4. SELF-PROPELLING UNIT, EXPLODED VIEW


33.3

KEY	PART NO.	DESCRIPTION		QTY.
4-1 4-2 4-3 4-4 4-4 4-5 4-1 4-1 4-1 4-1 4-1 4-1 4-1 4-1 4-1 4-1	1201-015 1604-041 215-026 1808-089 1808-141 1604-041 1808-150 1401-020 1604-041 1604-013 2501-027 1604-041 1808-147 1401-020 1604-041 1808-147 1401-020 1604-041 1604-013 2501-027 1604-041 1808-147 1401-020 1604-041 1604-013 2501-027 1604-014 1913-095 405-006 405-004 1803-007 204-020 311-002 1901-009 1917-014 1901-009 1904-058 1904-061 1904-060 1604-014 1913-095 405-006 405-004 1803-007 204-020 311-002 1901-009 1901-009 1901-009 1901-009 1901-009 1901-009 1901-009 1901-009 1901-009 1401-020 2301-021 212-025 2301-095	LEVER, FSP ENGAGING PIN, COTTER 3/32" X 5/8" BUSHING, NYLON 5/8" X 1/2" ROD, ENGAGING (S-22) ROD, ENGAGING (S-24, S-26) PIN, COTTER 3/32" X 5/8" ROD, FRICTION TENSION NUT, 5/16" PIN, COTTER 3/32" X 5/8" PIN, RIVET 5/16" X 1 1/4" YOKE, ADJUSTABLE 5/16" PIN, RIVET 5/16" X 1 1/4" PIN, COTTER 3/32" X 5/8" PIN, RIVET 5/16" X 1 1/4" YOKE, ADJUSTABLE 5/16" PIN, RIVET 5/16" X 1 1/4" YOKE, ADJUSTABLE 5/16" PIN, COTTER 3/32" X 5/8" ROD, FRICTION TENSION ROD, FRICTION TENSION NUT, 5/16" PIN, COTTER 3/32" X 5/8" PIN, RIVET 5/16" X 1 1/4" YOKE, ADJUSTABLE 5/16" PIN, ROLL 3/16" X 1 1/8" SPACER, 1 1/4" OD X 41/64" ID DRIVER, FRICTION SPLINE (S-22) DRIVER, FRICTION SPLINE (S-24, S-26) FRICTION, RATCHET RH PIN, ROLL 3/16" X 1 1/8" ARM, FRICTION SPRING, FRICTION RATCHET PIN, FRICTION SPLINE DRIVER 1/4" HUB, BEARING COLLAR, SET 5/16" X 5/16" NC SPROCKET, 36-TOOTH SCREW, SET 5/16" X 5/16" NC SPROCKET, 36-TOOTH SCREW, SET 5/16" X 5/16" NC SHAFT, FSP (S-22) SHAFT, FSP (S-22) SHAFT, FSP (S-26) PIN, ROLL 3/16" X 1 1/8" SPACER, 1 1/4" OD X 41/64" ID DRIVER, FRICTION SPLINE (S-22) DRIVER, FRICTION SPLINE (S-24, S-26) FRICTION, RATCHET LH PIN, ROLL 3/16" X 1 1/8" ARM, FRICTION SPRING, FRICTION RATCHET PIN, FRICTION SPLINE DRIVER 1/4" HUB, BEARING COLLAR, SET 5/8" SCREW, SET 5/16" X 5/16" NC NUT, 5/16" WASHER, FLAT 5/16" BOLT, SHOULDER 7/16" X 3/8" X 1 1/4" WASHER, FLAT 7/16" X 1 1/2"	\$ 22 \$24 \$26	Q17.
		20100-0-1070-0-107070707010 - 1000401001001011000 - 2700701 - 3700701		_

			THE RESERVE OF THE PERSON NAMED IN
KEY	PART NO.	DESCRIPTION	QTY.
4-50	305-025	CHAIN, FSP	1
4-51	1901-009	SCREW, SET 5/16" X 5/16" NC	1 /
4-52	1917-012	SPROCKET, FRICTION UNIT 5/8" BORE	1
4-53	1901-009	SCREW, SET 5/16" X 5/16" NC	1
4-54	1618-046	PULLEY, FRICTION	1
4-55	1901-009	SCREW, SET 5/16" X 5/16" NC	1
4-56	204-045	BEARING, FRICTION	1
4-57	1401-020	NUT, 5/16"	2
4-58	2301-004	WASHER, LOCK 5/16"	2
4-59	209-114	BOLT, CAP PLATED 5/16" X 1"	2
4-60	2301-021	WASHER, FLAT 5/16"	2 2 2 2
4-61	806-062	HOUSING, FRICTION HUB	1
4-62	1401-020	NUT, 5/16"	1
4-63	2301-004	WASHER, LOCK 5/16"	1
4-64	209-114	BOLT, CAP PLATED 5/16" X 1"	1
4-65	2301-021	WASHER, FLAT 5/16"	1
4-66	1401-020	NUT, 5/16"	1
4-67	2301-004	WASHER, LOCK 5/16"	1
4-68	209-114	BOLT, CAP PLATED 5/16" X 1"	1
4-69	2301-021	WASHER, FLAT 5/16"	1
4-70	1401-020	NUT, 5/16"	1
4-71	2301-004	WASHER, LOCK 5/16"	1
4-72	209-114	BOLT, CAP PLATED 5/16" X 1"	1
4-73	2301-021	WASHER, FLAT 5/16"	1
4-74	214-065	BRACKET, FSP (S-22)	1
4-74A	214-064	BRACKET, FSP (S-24)	1
4-74B	214-063	BRACKET, FSP (S-26)	1
4-75	205-425	BELT, FSP (S-22), (S-24)	1
4-75A	205-428	BELT, FSP (S-26)	1
4-76	1604-041	PIN, COTTER 3/32" X 5/8"	1

r. KZ

# 1105-057 Swivel Wheel Kit

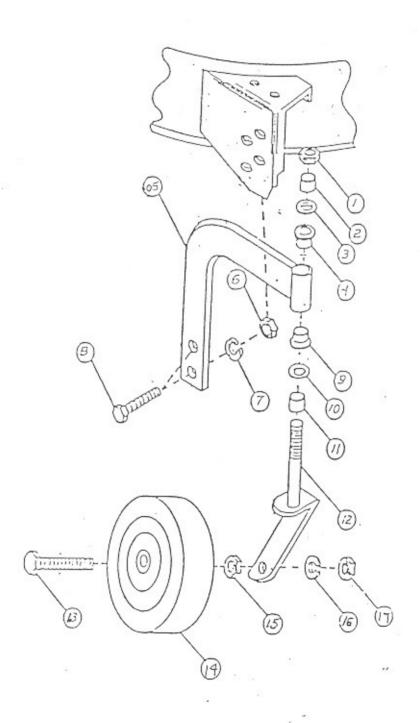

#### PART DESCRIPTION, SWIVEL WHEEL KIT.

#### /NSTALLATION INSTRUCTIONS,

- TEP (1) REMOVE FRONT WHEELS FROM MOWER.
- STEP (2) USING THE ASSEMBLY DRAWING AS A GUIDE, MOUNT THE SWIVEL WHEEL ARM TO THE MOWER FRAME. ITEMS NO. (5), (6), (7), (8) ARE NEEDED
- STEP (3) ASSEMBLE THE WHEEL AND YOKE TOGETHER. ITEMS NO. (12), (13), (14), (15), (16), (17) ARE NEEDED.
- STEP (4) MOUNT YOKE AND WHEEL ASSEMBLY TO SWIVEL WHEEL ARM. THE ASSEMBLE DRAWING PROVIDES A BASIC ASSEMBLY SET UP. THE SPACERS CAN BE RELOCATED WITHIN THIS ASSEMBLY TO ADJUST WHEEL HEIGHT FOR THE CUT DESIRED BY THE OPERATOR. ITEMS NO. (1), (2), (3), (4), (5) (10), (11) ARE NEEDED.
- NOTE: A NYLOK NUT HAS BEEN PROVIDED TO SECURE THE WHEEL AND YOKE ASSEMBLY AT A GOOD PIVOT POINT. THE NUT SHOULD BE TIGHTENED TILL THE ASSEMBLY IS TIGHT BUT WILL STILL PIVOT PROPERLY.

#### PARTS LIST 1105-057 SWIVEL WHEEL KIT

:F. #	PART NUMBER	PART DESCRIPTION	QUANTITY
06 07 08 09 10 11 12A 12B:	1401-228 1913-277 2301-334 0215-157 0214-474 1401-052 2301-008 0209-497 0215-157 2301-334 1913-277 2501-052 2501-053 0103-102 2302-023 1401-051 2301-008 1401-051	NUT, 1/2 IN. NYLOK NC. SPACER, ADJUSTMENT 1/2 WASHER, FLAT 1/2 IN BUSHING, NYLON ARM, SWIVEL WHEEL ASSY NUT, 1/2 IN FULL NC. WASHER, 1/2 LOCK BOLT, 1/2 IN X 1 1/4 IN NC BUSHING, NYLON WASHER, FLAT 1/2 IN SPACER, ADJUSTMENT 1/2 YOKE ASSEMBLY L/HAND YOKE ASSEMBLY R/HAND AXLE, 1/2 IN X 2 1/2 IN NF WHEEL ASSEMBLY FRONT NUT, 1/2 IN JAM NF. WASHER 1/2 IN LOCK NUT, 1/2 IN JAM NF.	2 2 2 2 4 4 4 4 2 2 2 2 1 1 2 2 2 2 2

Box 914-052